



For guidance on managing construction health risks go to

www.hse.gov.uk/construction





# 0137 Safety Guidance

### Using the Reversible Diesel Plate Compactor

- Wear your protective equipment including ear defenders and safety boots
- The centrifugal clutch on reversible compactors stops the plate vibrating while the engine is idling. The trhottle should be set to maximum when working.
- Always grip the plate compactor correctly with two hand while working.
- Watch for signs that vibration may be affecting hands. If fingers start to tingle or feel numb, take a short break from using the machine. Exercise fingers to encourage blood circulation.
- To help prevent vibration affecting hands, operate the machine for shorter periods. Keep hands warm - wearing gloves may help do this. Do not operate the compactor for more than the recommended daily time.
- Always keep hands, feet and clothing away from moving parts of the compactor.
- This machine will move forward or backwards and can be manoeuvered easily while the plate is vibrating. Be careful not to strain yourself by trying to move it; get assistance or use appropriate lifting equipment.
- When reversing take care not to: reverse over feet, trip over while walking backwards or trap yourself in a corner.
- Some reversible plate compactors have a safety feature if the operator loses control and releases the handle when being used in reverse. The handle will swing up vertical and the compactor will change into forward motion, allowing the operator to recover control.
- 10. Do not try to force the compactor to move faster, allow it to travel at its own speed forward or reverse; this will vary depending on the surface being compacted.
- If the surface to be compacted is sloping, take great care and only work up and down the slop and never across it.
- 12. If necessary attach a suitable piece of rope to a low point on the compactor chassis to enable an assistant to take part of the compactor's weight.
- When the compactor is not being operated, stop the engine and turn off the fuel valve.
- 14. If the compactor has tranpsort wheels ensure they are fixed properly to move the machine across the site.
- 15. If the compactor has to be left unattended for long periods, overnight for example, ensure it is safe from vandalism or theft.
- 16. If the equipment does not work properly do not attempt to repair it. Contact the hire

### Please keep this leaflet safely as it may be required for future reference





Stop the engine by operating the STOP

Guide the cord back into place so that it

engine, then pull it quickly and strongly.

can feel the starter has engaged with the

Pull the starter handle slowly until you

it will not move when the starter is pulled.

Ensure that the machine is held firmly so

Stop the engine by operating the STOP

use rne cold start device. I ne engine can 6. If the engine is warm, there is no need to

operate the cold start for a little longer.

seconds look to see if there is any smoke coming from the exhaust. If there is, try repeating the start procedure but apparet he shart for little leave.

If the equipment fails to start after a few

cause the machine to move as the

Do not have the throttle fully open when

start device for twenty seconds before

If the engine is cold, operate the cold

The machine may have a cold start device. This may be the first position of

starting switches - may be a key

Different machines will have different

operated switch or separate buttons.

the switch, or a separate button.

starting, then operate the start control.

or the centrifugal clutch

be started straight away.

Do not pull too far, or it may break.



2450 Regents Court







www.hae.org.uk



### Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

control.

Recoil Start

engine rires.

### engine running.

- This may automatically prevent the Check the oil level has not fallen too low surface.
- The equipment should be on a level deneral guideline.
- instructions follow them. If not follow these If the hire company has give specific starting

### STARTING THE ENGINE

- nove the fuel can to a safe, cool place Put all fuel caps back on properly and
- If any fuel is spilt on clothes, change
- nb or cover it with soil.
- If any fuel is spilt on the ground, mop it of the fuel soaked cloth carefully.
- Wipe any fuel off the machine. Dispose yourself or the machine.
- refuelling. Do not spill any fuel on Use a funnel and clean diesel when
- it to prevent dirt talling into the fuel tank. Clean the filler cap and the area around
- If possible move the machine away from 3. Stop the engine and allow to cool down. .S
  - 1. No smoking.

## **BEFUELLING**

the work area.

removed for work. ensure they are safely stowed, or d. It the compactor has transport wheels







# FTH HIRE GROUP

# **Reversible Diesel Plate Compactor**

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

### It is important to read this entire leaflet BEFORE using the Reversible Diesel Plate Compactor

- Plan work and think ahead to ensure work will always be carried out safely.
- Diesel fuel is highly flammable. Take care not cause a fire or explosion.
- The vibration from these machines may cause discomfort after prolonged use. Check the label on the machine or ask the hire company.
- If using this compactor on the public highway it may need to be HAUC compliant; check with the hire company.
- This reversible compactor is designed to compact crushed hardcore, backfill, asphalt and other materials on level surfaces or gentle slopes.
- This place compactor is heavy, it can cause injury or damage if it is not handled at all time in a careful and controlled way.
- If you have not used a reversible plate compactor before, receive instruction or guidance before using it. Star work in a safe area until familiar with its use.
- The following items of PPE (personal protective equipment) are the minimum required: Goggles, Dust Mask -minimum of FFP3 protection, Ear Muffs or plugs giving protection of 85 dB(A) at the ear; Safety Boots and Gloves.
- This machine must not be used by monors or by anyone under the influence of durgs or
- The plate compactor is designed for operation by an able bodied adult. Anyone with either a temporary of permanent disability should seek expert medical advice before using the













effort has been made by HAE/EHA to ensure that the information given in this docur to have arisen from the use of any such document/material. Only Acts of Parliament have the force of law and only the sounds. have the force of law and only the courts can authoritatively interpret the law.

44 (0) 121 380 4600 44 (0) 121 333 4109

The Crescent Birmingham Business Park noo sinegen uch

**BAY 788 Iludilos** 



### company.

- the final surface. Check with the hire a rubber mat fixed to the plate to protect Some surfaces, like paving blocks, need sticking to the plate.
- water spray to prevent the surface When compacting aphalt or tarmac, us a enpplied as standard with the machine.
- Some or all of the accessories may be

### **VCCESSOBIES**

- Before starting the machine, know how to Ensure you understand all of the controls. hands warm while working.
- starting work, and wear gloves to keep Vibration from using this plate compactor can be hazardous. Warm hands before correctly with two hands while working.
- grip the plate compactor AIWays to be damaged - contact the hire
- Check the machine, engine and all equipment. Do not use anything found when moving it into position. Take care assistance when lifting the plate compactor off a transport vehicle and This is a heavy machine.

## PLATE COMPACTOR

brotective equipment. need to wear appropriate personal Anyone who is working closeby will also

of a safety helmet. Site regulations may require the wearing

working with the plate compactor. Satety Boots must be worn when compacting material that causes dust minimum of FFP3 must be worn when An appropriate dust mask with a working with the machine.

Goddies sponid always be worn when when operating the skip loader for long

ear muffs or plugs giving hearing protection for this level as a minimum levels up to 85 dB(A) – wear appropriate The equipment is likely to cause noise evel of protection.

or environment may require a higher naing the plate compactor. Particular minimum that should be worn whenever protective equipment (PPE) are the The following items of personal

# **OPERATORS**

or other services laid just beneath the may damage undergiround pipes, cables The compacting action to this machine away, erect barriers around the work area debris and dust. Warn others to keep Protect othejr people from the noise,

is closeby who could cause Ensure the area is clear and safe and noventilation will almost always be required. Mechanical the ventilation required has been fully other indoor situations if its suitability and in domestic premises and only use it in carbon monoxide poisoning. Never use it confined spaces could cause fatal Using this equipment indoors or in

kom betrol or gas cylinders. danger of explosion. It will ignite fumes Do not use the machine where there is a

**WORK AREA** 

## Electric Start















