



Using the Wallpaper Stripper

- Wear your gloves.
- Each section of wallpaper treated will be very hot. Take care while handling it.
- Switch off and remove the plug then allow the equipment to cool down completely before refilling.
- Always place the boiler unit on a heat resistant drip tray and not on a decorative surface. Make sure the steam plate is placed on a heat resistant drip tray when not in use.
- The part that stays hot longest is the filler cap. Allow it to cool then remove it carefully with a protective glove or cloth. Remove it in stages, allowing any pressure to release slowly.
- Keep the cable clear of any sharp edges in your work area.
- If you think the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the wallpaper stripper is damaged, stop using the equipment. Contact the hire company. If an extension cable has been damaged, do not use it again.
- Take care not to accidentally pull the plug from the socket.
- Switch off and remove the plug from the socket then allow the equipment to cool down before leaving unattended.
- Switch off and remove the plug then allow the equipment to cool down completely before emptying.
- If your equipment does not work properly do not attempt to repair it. Contact the hire company.
- You may want to read this leaflet again. Please keep it until you finish work.

Please keep this leaflet safely as it may be required for future reference



v:112016



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solihull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

©Copyright Hire Association Europe April 2011
Any unauthorised reproduction - manually or electronically - is STRICTLY prohibited

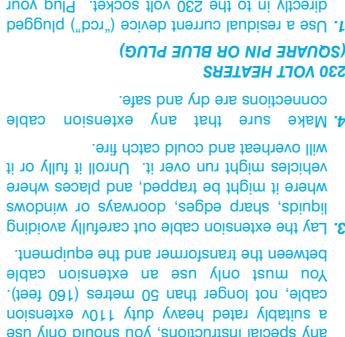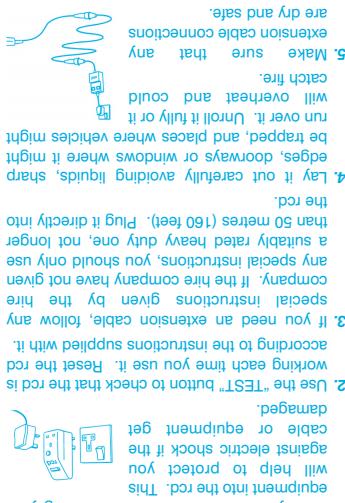

5. Make sure that any extension cables or flexible hoses you have used are dry and safe.
6. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might run over it. Hold it firmly or it will overheat and could catch fire.

7. Use the "TEST" button to check that the red light is illuminated. Press the button to the right of the steam plate. Plug it directly into the 230 volt socket. This equipment will only operate on one voltage.

ELECTRICAL SAFETY
8. Do not touch the steam plate near electrical sockets or switches.
9. Do not use the steam plate near electrical sockets or switches.

10. During use the steam plate will become very hot. Use a heat resistant drip tray where you can use. Use a heat resistant drip tray where you can use. Use a heat resistant drip tray where you can use.

STEAM PLATE



Wallpaper Stripper

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

**It is important to read all of this leaflet
BEFORE you use the Wallpaper Stripper**



- Plan your work and think ahead to make sure you will always be working safely.
- Electricity is dangerous and must always be used with great care.
- Electricity and water make a hazardous combination. Keep electrical parts away from rain and water.
- Steam will scald or burn instantly; take great care.
- This wallpaper stripper is designed to remove all types of wallpaper, including emulsioned or washable paper.
- The action of this wallpaper stripper can cause injury or damage if the equipment is not used in a careful and controlled way.
- If you have not used a wallpaper stripper before, familiarise yourself with the equipment on some straightforward work before starting on the main task.
- You should have at least the following items of personal protective equipment: Heavy duty waterproof gloves; Rcd if using a 230 volt (mains) supply.
- This equipment must not be used by minors, or by anyone under the influence of drugs or alcohol
- This wallpaper stripper is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.



Hire Association Europe
2450 Regents Court
The Old Crescent
Birmingham Business Park
Solihull B37 7YE

- WALLPAPER STRIPPER**
- The following items of personal protective equipment should be worn when using a wallpaper stripper: Gloves, safety glasses, ear defenders, respirator mask, and boots. Check the hire company if any of these items are required.
 - You should wear heavy-duty waterproof clothing. Check your equipment for any damage and replace if found.
 - Do not remove the filter cap while the equipment is operating. Shut off the equipment to cool the filter slowly. Use a blow-off gun to release the filter slowly. Shut off the equipment to cool the filter slowly. Use a blow-off gun to release the filter slowly.
 - Fill the tank up to the level mark with clean water only. Additives should not be used unless specifically recommended by the hire company.
 - Before starting, ensure all hose connections are tight.
 - Open doors or windows to improve ventilation and remove excess moisture.
 - Place it on a heat-resistant drip tray. Place it on a heat-resistant drip tray. Place it on a heat-resistant drip tray. Place it on a heat-resistant drip tray.
 - Do not stand the boiler unit on decorative carpets, furniture, or other fittings that may damage the floor.
 - Move or tilt the steam plate will damage the floor or other fittings that may damage the floor.
 - Keep your work area clean; put up warning signs, others to keep away. Put up warning signs, others to keep away. Put up warning signs, others to keep away. Put up warning signs, others to keep away.
 - Protect other people from the steam. Warm will clear air.
 - Check that the plug on your equipment matches your supply. Do not try to force connections or improvise them.
 - Make sure that the plug is clear and suitable for the equipment. Keep children and animals away from the steam.
 - Do not use this equipment on ceilings or for overhead work – the drips from the steam plate would scald your face or hands.
 - Do not use this equipment on gas cylinders. There is a danger of explosion. It will ignite fumes from the cylinder, or gas cylinder.
 - Before starting work, turn off the steam plate world scald your face or hands.
 - Work Area
- Before Starting Work**